


How to upgrade the VPU firmware?

1. Save the VPU firmware file to the USB memory or P2 card*.
 2. Plug that USB memory to VPU or insert that P2 card to VPU.
- Then, go to the following steps to upgrade by either SI or Control Panel.

*The P2 card stored video files cannot be used.

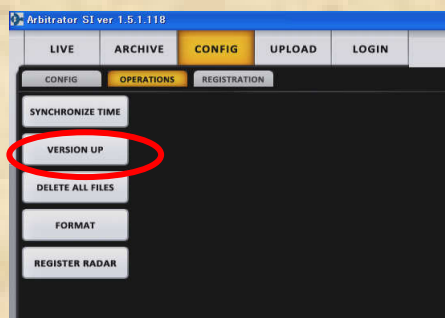

[By SI]

- (a) Go to “CONFIG” by SI menu and select “OPERATIONS” tab.
By pressing “VERSION UP”, the firmware upgrade will automatically start.
- (b) While upgrading, “REC” and “BUSY” button on VPU stays ON and “READY” button is blinking.
- (c) After upgrading, VPU and SI will reboot. SI will be reconnected and go back to “Live” mode automatically when the version up is completed.

*To make sure for the right firmware version, select “CONFIG” tab and go to “Service”.

**AG-CPD15P firmware version 3.30.009.0 applies to SI1.5.1, mini SI 1.5.1, CMS3.1.

[By Control Panel]

- (a) Go to “Setup/Info”, “Admin (2/2)” by Control Panel menu and select “Service”.
- (b) Press “Version Up”
- (c) Press “Yes” in “Version Up”. While upgrading, “Version up executing. Do not touch! Do not power off!” message will be appeared.
- (d) Then, VPU will reboot and go back to “Live” mode on screen automatically when the version up is completed.

*To make sure for the right firmware version, go to “Setup/Info” and “Information”.

